

## U-BOOT Boot Loader Command Overview

The user interface to U-Boot consists of a command line interpreter (CLI), much like a Linux shell prompt. When connected via a serial line you can interactively enter commands and see the results. Table 1 shows the available U-Boot commands for the DIL/NetPCs DNP/2110 and DNP/9200.

Command	Function
autoscr	run script from memory
base	print or set address offset
bdinfo	print Board Info structure
bootm	boot application image from memory
bootp	boot image via network using BootP/TFTP protocol
bootd	boot default, i.e., run 'bootcmd'
cmp	memory compare
cp	memory copy
crc32	checksum calculation
echo	echo args to console
erase	erase FLASH memory
flinfo	print FLASH memory information
go	start application at address 'addr'
help	print online help
iminfo	print header information for application image
loadb	load binary file over serial line (kermit mode)
loadc	load binary file over serial line (ymodem-c mode)
loadg	load binary file over serial line (ymodem-g mode)
loads	load S-Record file over serial line
loop	infinite loop on address range
md	memory display
mm	memory modify (auto-incrementing)
mtest	simple RAM test
mw	memory write (fill)
nm	memory modify (constant address)
printenv	print environment variables
protect	enable or disable FLASH write protection
rarpboot	boot image via network using RARP/TFTP protocol
reset	perform RESET of the CPU
run	run commands in an environment variable
saveenv	save environment variables to persistent storage
setenv	set environment variables
sleep	delay execution for some time
tftpboot	boot image via network using TFTP protocol and env variables ipaddr and serverip
version	print monitor version
?	alias for 'help'

**Table 1:** U-Boot Command Overview